



Main button panel

Power Ein/Aus (On/Off)

- Switches the system on and off
- Flashes when the system is switched on

Beamer Bild Ein/Aus (picture On/Off)

- Switches the beamer image on and off
- Flashes when the projector starts up

Volume Control

- Regulates the volume
(without hybrid system)



The following sources can be selected:

Hörsaal PC (Lecture room PC)

- Apple computer in the room, if available (Hörsaal PC cable)

Laptop

- Connection to show your own device on the projector (Laptop cable)

Visualizer (Visualiser)

- Presenter, for example to show worksheets on the projector

Wireless Präsentation (Wireless presentation)

- Wireless transmission of your own device to the projector (follow the instructions on the projection)

Player extern (External player)

- Audio signal that is mixed with the other sources (Player Extern cable)

Extern (External)

- Only available in receiving rooms. Audio and video are displayed during transmissions.

Hybrid System, see page 2



Hybrid system



USB VC

- The hybrid system is switched on by connecting this USB cable (USB-A plug) to a laptop. The selected camera image and microphone signal are made available on the laptop for use in all common video conferencing software. CAM AUTO is activated automatically
- For other USB connection types, you will need an adapter to USB-A
- In your video conferencing software, you must select and activate the loudspeaker device, microphone device and camera device of the hybrid system ("Room name", e.g. KO2-D-54)

Operating the hybrid system

These buttons and displays are only active and displayed when the hybrid system is active

CAM DOZ

- Rear camera, shows lecturer area
- Button lights up green when selected

CAM PLENUM

- Front camera, shows student area
- Button lights up green when selected

CAM AUTO

- CAM DOZ or CAM PLENUM is automatically selected and focusses on the person speaking
- CAM AUTO is automatically selected when the USB cable is connected
- Button lights up green when selected
-

MIK MUTE

- Switching the microphones and the source signal on and off
The function and display is synchronised with the audio mute function in Zoom/Teams
- Button does not light up when the ceiling microphone is switched on
The LED indicator for the ceiling microphone lights up green
- Button lights up red when the ceiling microphone is switched off
The LED indicator for the ceiling microphone also lights up **red**



Video mute

To mute the camera image, please use the corresponding function in Zoom/Teams